



Connection with isolator switch

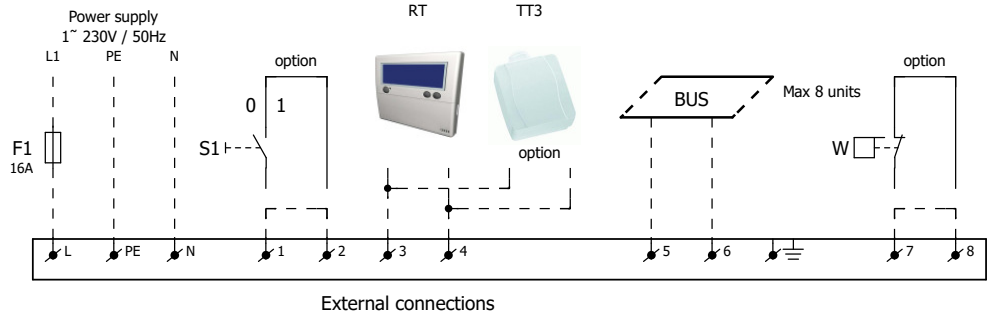

- F1, F2 - Fuse
- GV1, GV2 - Gasvalve
- H1 - Alarm light
- IS - Ionization bar
- K1 - Relais fan (External)
- PF - Pressure switch filter (when used)
- VLV - Combustion air fan
- RT - Digital room thermostat
- S1 - On/off switch (option)
- S2 - Reset button
- TT1 - Temperature sensor in the vicinity of the unit
- TT2 - System / maximum temperature sensor
- TT3 - Digital room temperature sensor (optional)
- W - Condensation water sensor (option)
- WS - Isolator switch

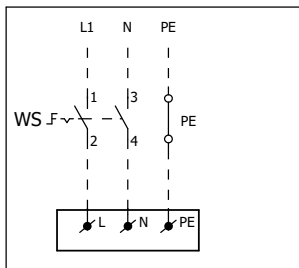